

SLW929 Animal Hopscotch Playmat Manual

Before using the Animal Hopscotch Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Animal Hopscotch Playmat to a third party, please include the instructions as well.

Animal Hopscotch Playmat

Item # SLW929

This unit includes: 1 x Animal Hopscotch Playmat with control box

Before use:


Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat.

When the power is on, the mat will play a Power On Signal.

Play

- First mode: The default mode is the first mode. This is a musical note mode. You will hear DO-RE-MI-FA-SO-LA-TI-DO as you step on number 1-2-3-4-5-6-7-8.
- Second mode: Press "Select" key to enter second mode. This is animal sound mode and key number 2 will be lighted. You will hear doggie, calf, rabbit, sheep, horse, duck, cat and bird while you stand on number 1,2,3,4,5,6,7 and 8.
- Third mode: Press "Select" key again to enter third mode. You will see the key number 3 lighted. This is a catch-me game with three levels. Game speed will increase while you move on to next level.

Product Photo

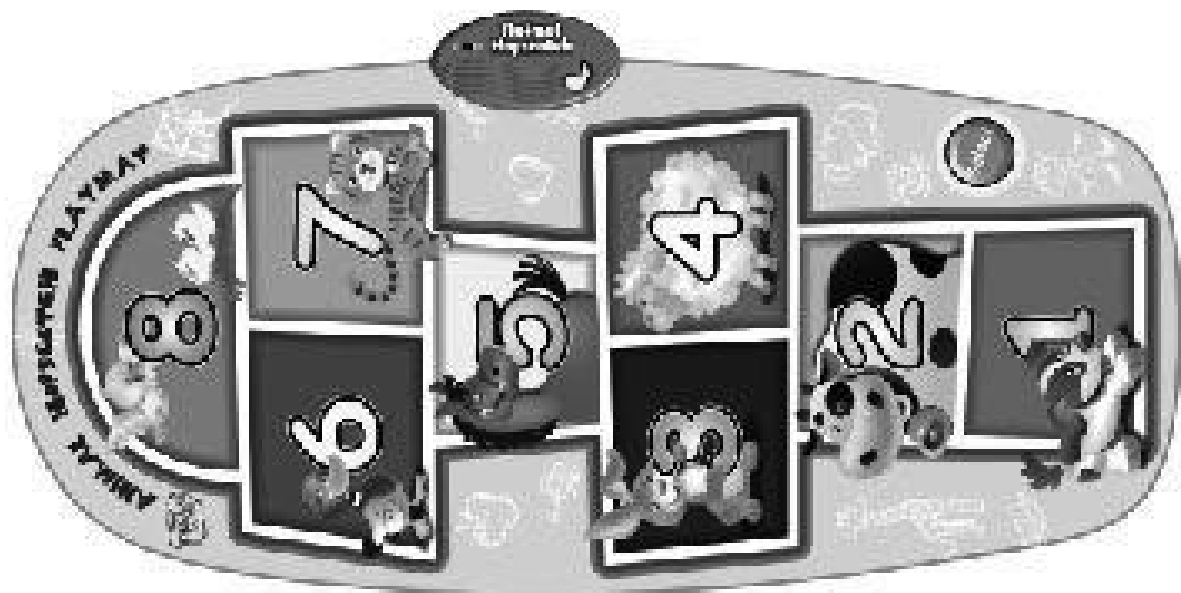

Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.