

# SLW936 Animals' Party Playmat Manual

Before using the Animals' Party Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Animals' Party Playmat to a third party, please include the instructions as well.

## **Animals' Party Playmat**

Item # SLW936

This unit includes: 1 x Animals' Party Playmat with control box

Before use:

Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat. When the power is on, the mat will play a Power On Signal.

## **Play**

- Default is free mode in which kids can play keyboard and animal sound in free style.
- Select 1: Press SELECT once and choose favorite animal to play keyboard with animal tone.
- Select 2: Press SELECT twice, select one demo song from 8 keys and choose one animal to sing along.
- Select 3: Press SELECT three times, select one animal choir from 8 keys. Press animal to stop the choir.
- Select 4: Press SELECT four times, select one demo song from 8 keys. Press animal to stop the demo.
- Select 5: Press SELECT five times. It is one key one note mode in which kids can select animal to play tunes. The default sound is keyboard.

## Product Photo



## Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.