

SLW9711 Touch & Learn Playmat Manual

Before using the Touch & Learn Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Touch & Learn Playmat to a third party, please include the instructions as well.

Touch & Learn Playmat

Item # SLW9711

This unit includes: 1 x Touch & Learn Playmat with control box

Before use:

Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat. When the power is on, the mat will play a Power On Signal.

On the Playmat, there are two buttons to adjust the volume: "VOLUME +" & "VOLUME -"

Letter Mode

Pressing the "letter keys" (A-Z), "color& shape keys" ("PD", "OR", "YC", "BT", "GS", RH" and "PO") to learn the relevant pronunciation.

Or you press the Quiz/Retry key, the mat will say, e.g. "Let's find the leaf," you have 3 chances to find out the correct letter in response to the instruction. In this case, the answer should be "L".

Spelling Mode

Pressing the "letter keys" (A-Z), "color& shape keys" ("PD", "OR", "YC", "BT", "GS", RH" and "PO") to learn the spelling of the words pre-installed in the mat.

Or you press the Quiz/Retry key, the mat will say, e.g. "How do you spell apple?" you have 3 chances to press the relevant letter keys a-p-l-e to spell apple.


Piano Mode

The "letter keys" (A-Z), "PD", "OR"& "YC" keys represent different music notes. You can also select piano, violin, electronic organ & trumpet by pressing "BT", "GS", "RH", "GS", "RH" and "PO" keys.

Demo Mode

There are 6 melodies. Press once one melody.

Product Photo

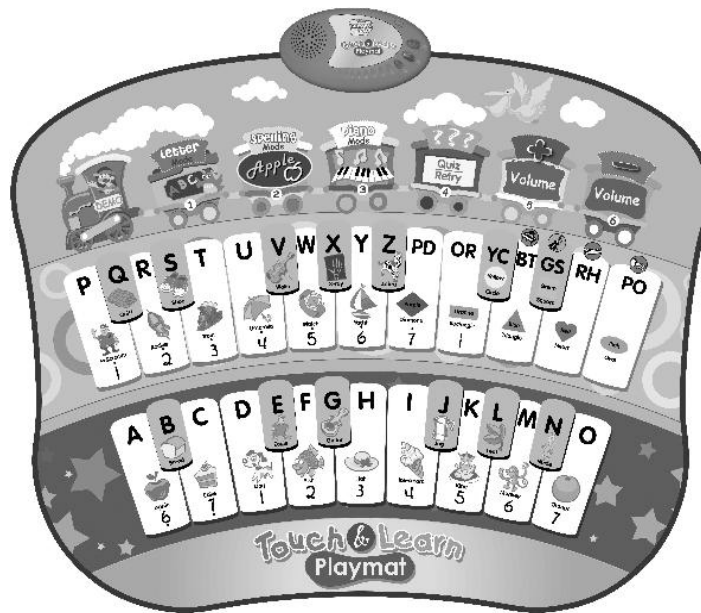

Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.