

SLW9715 Dancing Challenge Playmat Manual

Before using the Dancing Challenge Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Dancing Challenge Playmat to a third party, please include the instructions as well.

Dancing Challenge Playmat

Item # SLW9715

This unit includes: 1 x Dancing Challenge Playmat with control box

Before use:

Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat.

Play

- Press 'Start' to begin the game, the default level is Level 1. Press 'Start' to change levels. There are 5 levels in total.
- Level 1 – Press correct button on the playmat according to the light shown on control box. In Level 1, one light will be indicating what number should be pressed on the playmat each time. The game lasts one minute, and player is allowed to miss 7 times before moving onto next level. If player misses more than 7 times, the game will be ended and can be restarted by pressing 'START'.
- Level 2 – speed will be faster, others remain the same as Level 1.
- Level 3 – one or two lights will be indicating what numbers should be pressed on the playmat each time. Others remain the same as Level 1.
- Level 4 – up to three lights will be indicating what numbers should be pressed on the playmat each time. Others remain the same as Level 1.
- Level 5 – up to four lights will be indicating what numbers should be pressed on the playmat each time. Others remain the same as Level 1.

Product Photo



Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.