

SLW9716 Hip Hop Mixer Playmat Manual

Before using the Hip Hop Mixer Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Hip Hop Mixer Playmat to a third party, please include the instructions as well.

Hip Hop Mixer Playmat

Item # SLW9716

This unit includes: 1 x Hip Hop Mixer Playmat with control box

Before use:

Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat.

Play

- Press "Start" key on the playmat and you will hear exciting music. Press 'Start' key to switch music and there are 4 different songs.
- There are five mix keys on the playmat, each key has one special sound effect. Press one of them to hear the sound effect.
- Music speed is adjustable by pressing "+" and "-".

Product Photo



Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.