

SLW9718 Electronic Keyboard Playmat Manual

Before using the Microphone Keyboard Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Microphone Keyboard Playmat to a third party, please include the instructions as well.

Electronic Keyboard Playmat

Item # SLW9718

This unit includes: 1 x Electronic Keyboard Playmat and 1 x Microphone

Before use:

Open the back battery compartment with a screwdriver and install 4 AA batteries (not included). Close the lid and flatten the mat.

Play

- the Microphone Keyboard Playmat has 10 different rhythms to select. Press rhythm keys 1-10 to activate this function.
- Press 'TEMPO UP' and 'TEMPO DOWN' to speed up and slow down the rhythm.
- Press 'Tone 1' to select 8 different instrument tones.
- Press 'Tone 2' to select from another 8 different instrument tones.

Mode

- Drum mode: press 'DRUM' to enter drum function and press 'DRUM 1' to 'DRUM 8' to select from 8 different drums. Pressing the 'DRUM' again in sequence the 8 drum keys will switch to 'Tone 1' instruments and 'Tone 2' instruments.
- Rhythm Edit mode: press 'Rhythm Edit' key to enter this mode and press 'DRUM 1' to 'DRUM 8' to record own rhythm. Press 'Replay' to play back. Press 'Rhythm Edit' again to exit this mode.
- One Key One Note mode: Press 'O.K.O.N' to enter One Key One Note mode. Press white keys to play songs. Press 'Stop' to exit.
- Learning mode: Press 'Lesson' to enter and press white keys to select background music. While background music is playing, practice keyboard and drums along with the selected song. Press 'Tone 1' and 'Tone 2' to change tone.
- Fill-in mode: press 'Fill in' to mix drum sound to the rhythm.

Demo

- Press 'Demo' to enter demo melody play mode.
- 6 demo songs to select.
- Press 'Stop' to end.

Record

- Press 'Record' to enter and can record a short clip.
- Press 'Replay' to playback the recorded music.
- Memory will be cleared by pressing 'Record' again.

Product Photo



Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.