

SLW9726 Dance Mixer Playmat Manual

Before using the Dance Mixer Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Dance Mixer Playmat to a third party, please include the instructions as well.

Dance Mixer Playmat

Item # SLW9726

This unit includes: 1 x Dance Mixer Playmat and 1 x MP3 cable

Before use:

Open the back battery compartment with a screwdriver and install 4 AA batteries (not included). Close the lid and flatten the mat.

Play

- Press "Start" to begin and follow the flashing lights. There are 4 different songs available to select.
- Each button has one special sound effect and pressing them to mix songs.
- Tempo is adjustable by pressing "+" and "-".
- MP3 function: When MP3 player is plugged in, the built-in music is not available to play. The speaker will play music from MP3 player and lights will flash randomly. Player can dance on five mix buttons to play with the music.

Product Photo



Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.