

SLW9784 Target Playmat Manual

Before using the Target Playmat for the first time, kindly take time to carefully read the instructions. Please observe all safety precautions and follow operating procedures. After reading, kindly store the instructions in a safe place for your future reference. If you pass this Target Playmat to a third party, please include the instructions as well.

Target Playmat

Item # SLW9784

This unit includes: 1 x Target Playmat and 6 x dart

Before use:

Open the back battery compartment with a screwdriver and install 3 AA batteries (not included). Close the lid and flatten the mat. When the power is on, the mat will play a Power On Signal.

Play

- MODE 1 – Free Mode. Players just throw darts to the mat. The score will be recorded and the game ends in 10 shots.
- MODE 2 – Competition Mode. 15 chances for each player and whoever gets the highest score will be the winner. If player scores more than 100 in 15 shots, the game will proceed to level 2. The game has 6 levels in total and will be finished after 600 scores reached. However, player loses the game if score is less than 100 in 15 shots.

Product Photo



Battery Warning and Caution

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use any sharp items on the mat.
- The mat is not washable.
- This toy is for kids age 3 and up. Adult supervision is required.